

## **BATH - UNDERMOUNT INSTALLATION**




#### **ATTENTION - PLEASE READ!**

This product requires professional installation. Please provide your countertop fabricator with this information. Please observe all state and local building and plumbing codes.

### TEMPLATE/GUIDE

The template provided is to be used as a guide for cutting.

Due to the nominal dimensions and installation
preference, some customization will be required. In some
instances a template may not be included. If this is the
case, the countertop fabricator will make a custom
template based upon installation preference.

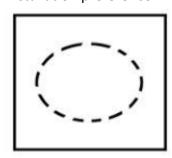

#### **HOMEOWNERS**

Please read before installation

#### **NEW INSTALLATION**


When preparing for installation it is recommended that you consult with your countertop fabricator as to your installation preference. When the fabricator is preparing the template for installation, a ¼" overhanging recommended to provide a clean transition from countertop to sink. The overhang will hide any sign of the silicone adhesive.

#### **REPLACEMENT**

If replacing a pre-existing hole, make sure that the model you have chosen is larger than the existing hole. This will allow for any adjustments that might be needed for the installation process.

#### **WARNING**


Before installation, please inspect your product for any damage that may have occurred during shipping. If the product was damaged during the shipping process or your product needs to be retuned for another reason it must be in the original packaging. If the product is not returned in the original packaging, you amy not be eligible for a refund. Return fees may apply. Please contact your dealer for more information.

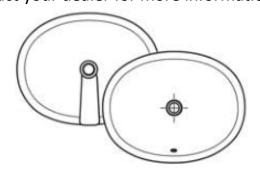

## **STEP 1: PREP**

For proper adhesion, please make sure that the rim is clean, dry, and dust free.

- 1. If replacing an existing sink, make sure that you have lined up the sink so that the overhang is equal all the way around. It is suggested to dry fit the sink and mark its location before installation.
- 2. Apply a continuous bead of silicone sealant/adhesive specifically designed for plumbing application.

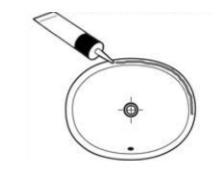

## **STEP 2: INSTALLATION**

After you have confirmed that the sink lines up correctly within the existing hole cut-out, it is now time to install the sink.


- 1. Center the sink on the underside of the countertop using the marks you created during the dry fitting.
- Using the new hardware/existing hardware, loosely tighten the clips with the angled side facing down. After final adjustments have been made, tighten clips. Do not over tighten
- Clean any excess sealant from the rim immediately and prepare for plumbing.

## **STEP 3: MAINTENANCE**

To clean, please use common cleaners designed for bathroom sanitary-ware. This product is made from vitreous china with a porcelain enamel glaze. The product is designed to handle normal everyday cleaning. It is not designed to withstand large objects dropped from height. This will potentially crack or shatter the bowl of the sink.

Please see dealer warranty for more details.

# **BATH - VESSEL INSTALLATION**

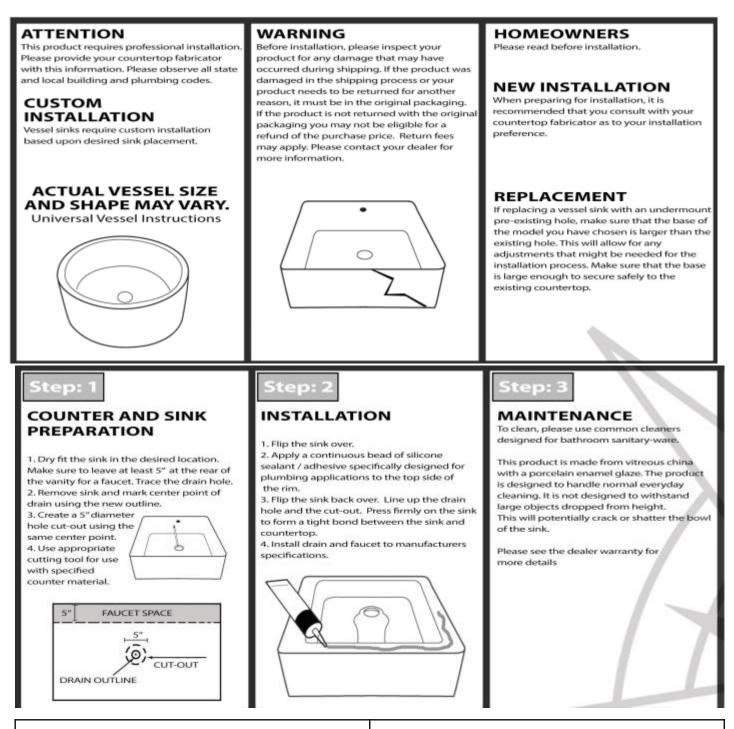

## WHATS INCLUDED

Vitreous China Bowl Guide/Template Sink Hardware

## WHATS NOT INCLUDED

Silicone Sealant/Adhesive