

UTILITY DRAIN INSTALLATION FOR WALLMOUNT SINK SETS

CHROME DRAIN - MODEL HP-WMCI22-MBST

1. Apply a small amount of non-acid silicone under the rim of the strainer flange and push flange down into sink.
DO NOT USE PLUMBERS PUTTY.


2. Lubricate the flange gasket with water. Place into the lip of the drain cup, and position on the sink bottom.

3. Line up the drain cup over the threaded tail then screw in the cup nut.
CAUTION: hand-tighten first, then 1/4 turn with wrench.
DO NOT OVER-TIGHTEN.

4. Place the tail, nut and tail flange gasket over 1.5" drain flange tail (not supplied)
HAND TIGHTEN ONLY.

5. Check for leaks.

COMPONENTS

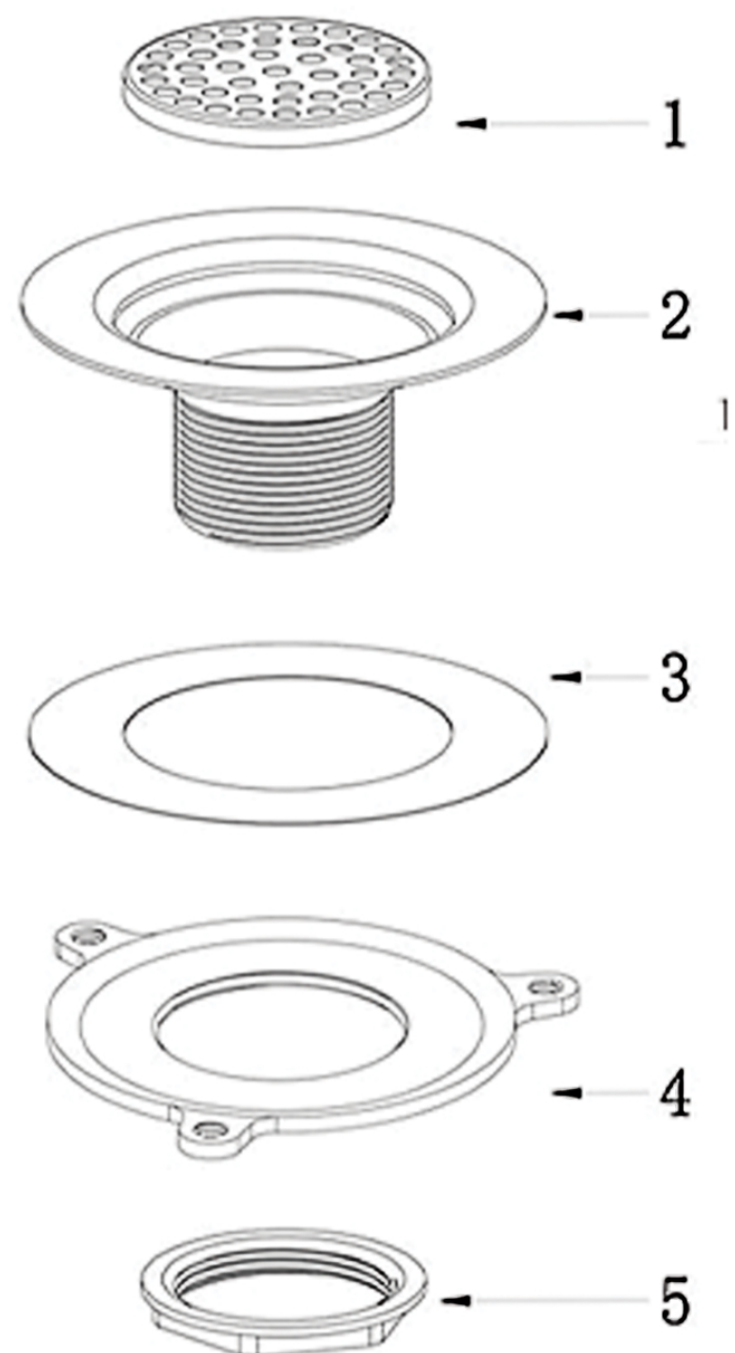

PLEASE CONSULT A LICENSED PLUMBER IF YOU ARE UNFAMILIAR WITH THIS TYPE OF INSTALLATION.
IT IS RECOMMENDED THAT A LICENSED PLUMBING CONTRACTOR INSTALL THIS ITEM TO MAINTAIN WARRANTY.